

VanMoof S3 & X3 Boost/Bell button replacement procedure

VanMoof 2020

V1.50

Provided to the customer:

If there are any questions please contact VanMoof Support on +31 (0) 20 205 10 79.

1. Unscrew the button using an #2 Allen key.



2. Break the glue with a plastic tool.



3. Gently pull out the button.



4. Push down the shrink tube.




5. Closeup button legs without shrink tube.



6. De-solder the button.



7. Short the wires to test is the cables are intact.

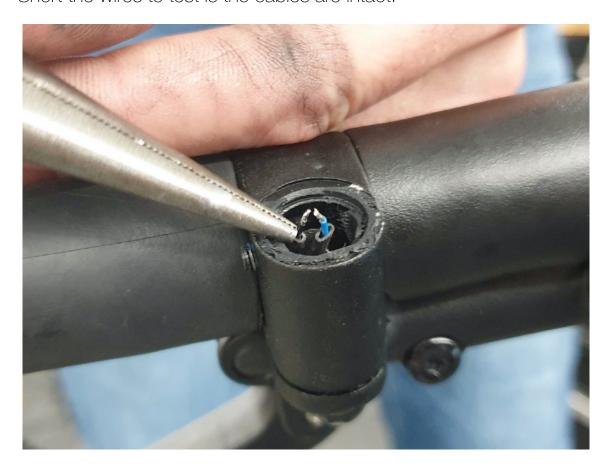

8. De-solder new button off the new cable.



9. New de-soldered button.



10. Solder on the new button, no specific orientation.



11. Test if the button works.



12. Apply sealant to seal of red parts. (also part that is not sealed in photo)



13. Twist the button until the flat part faces the bolt.



14. Fasten bolt.



15. Bolt too tight.



16. Correctly mounted.

